

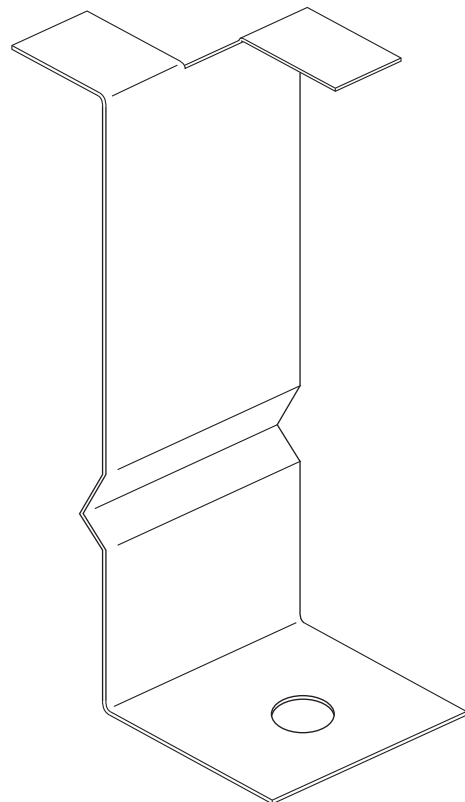
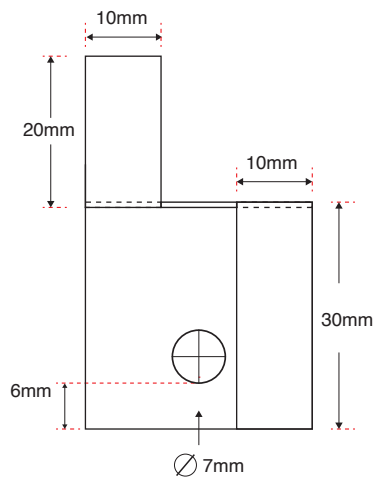


# STONECLAD Oamaru Stone System


Original Scale 1:2  
 Revision - 18 October 2021  
 Adheres to NZS 4210 code of practice: non flexible wall ties

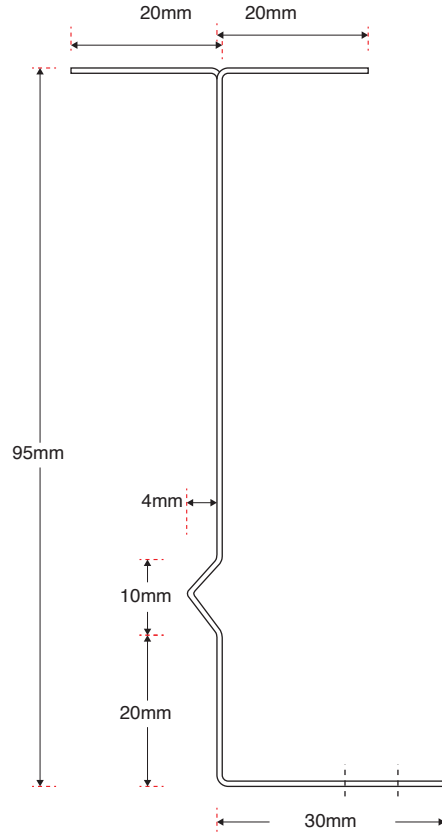

[www.stoneclad.co.nz](http://www.stoneclad.co.nz)

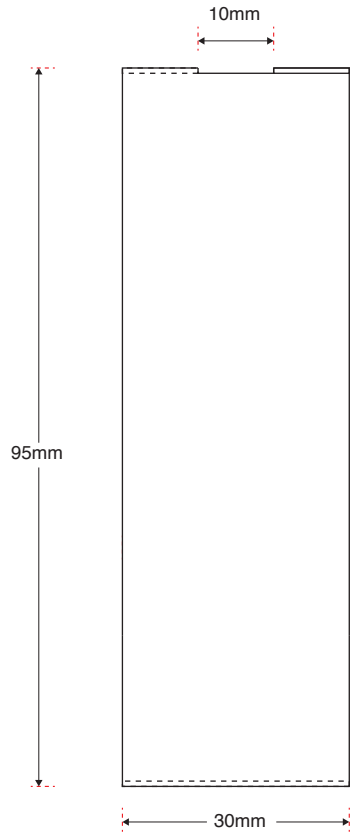

# Placement for 95mm Wet Cavity Stone Clips.

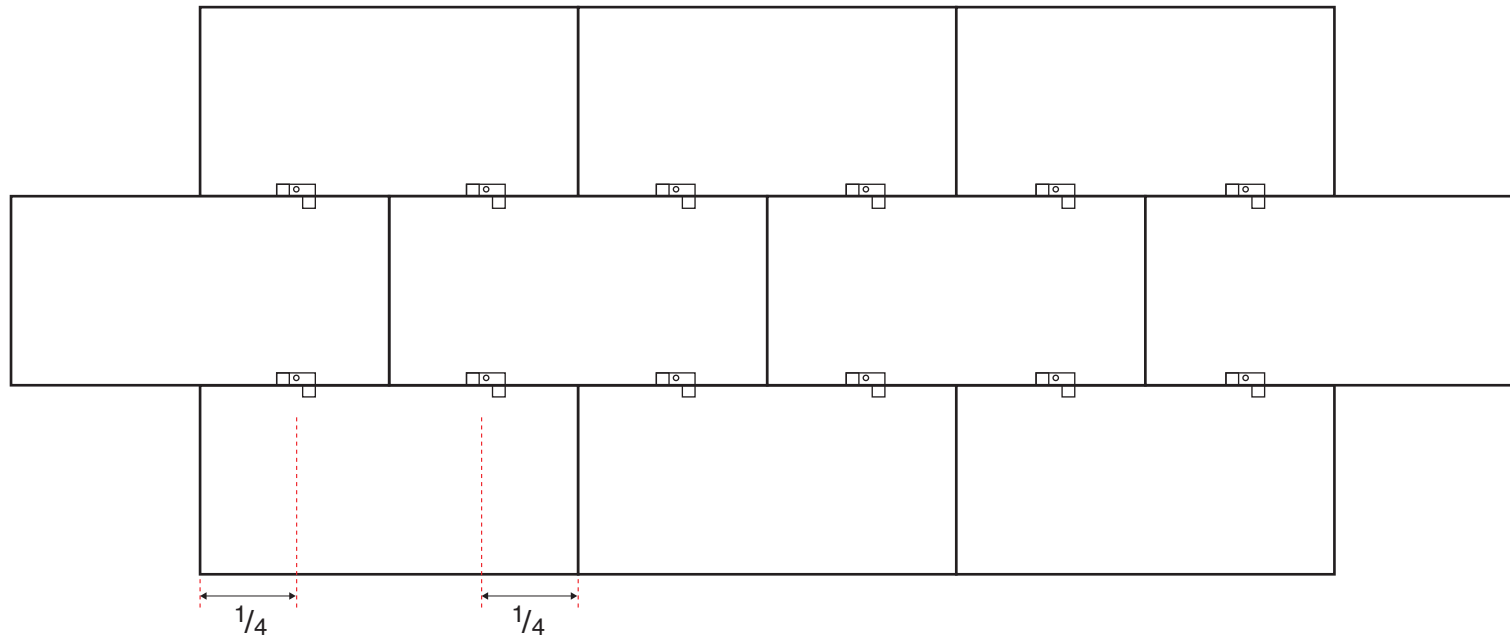

## Installation Guide STONECLAD Oamaru Stone Clips

### - Wet Cavity System

1. Measure and mark the fixing point. Create a slot with grinder cut to accommodate stone clip tag
2. The Stone Clips shall run 5 degrees down from the structure to the masonry cladding
3. The mortar should be applied on the stones bed before fixing the stone clip in place
4. The Stone Clips are designed to hold strongly in mortar, so good staggered placements are recommended over horizontal lines of placements
5. The Stone Clips shall be positioned so they sit half way in the mortar joint, not hard down against either bed
6. Do not pre-install or bend Stone Clips, they must be installed as stone installation progresses
7. Only stainless steel fixings should be used in combination with STONECLAD Stone Clips
8. Where a waterproof membrane is in place and will be punctured by a fixing, an application of a suitable sealant behind each fixing is recommended as good practice
9. Space ties evenly among the stonework as per engineer specifications
10. Only use as per the stone solution described on council approved plans
11. We recommend all stonework to be installed as per New Zealand Stonemasons Association Best Practice Guide ([www.nzsma.co.nz](http://www.nzsma.co.nz))